

# LeBra®

## Owner's Manual

### Model #55012 - LeBra® Pontiac Firebird and Trans Am


#### About Your Global Accessories Product

Congratulations on your purchasing decision. Global Accessories, Inc. designed the LeBra® Front End Cover to be the very best available. With proper care, your LeBra® Front End Cover will provide years of stylish looks and maximum protection.

Installation of the LeBra® Front End Cover is a simple process that should take about 30 minutes. Removal and reinstallation (as for car washing) takes just a few minutes.

If you encounter any problems during the installation of your LeBra® Front End Cover, please contact our Consumer Response Department, Monday - Friday, 9AM - 4PM (MST) at 1-800-950-9502.

**Note:** Please read this manual thoroughly before beginning the installation. After completing installation, keep this manual for further reference.

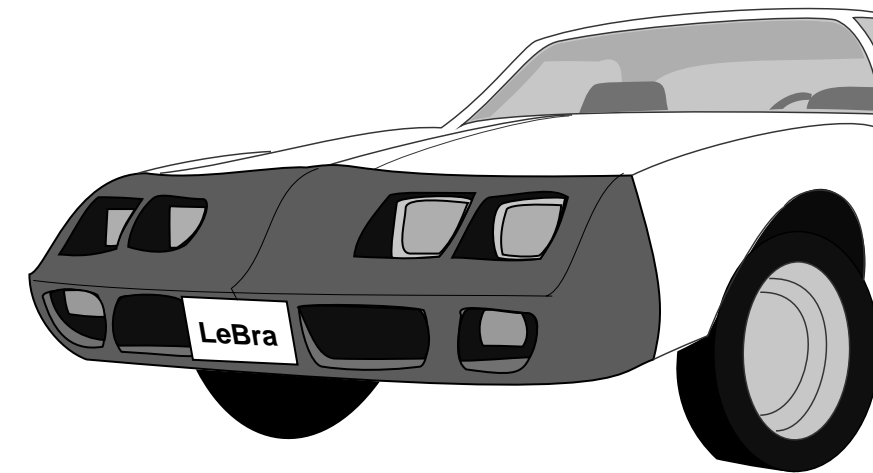

#### Tips for Easier Installation and Care

- [] Before Installation, wash and wax your vehicle. Use a paste wax—not a spray—on the hood and fenders in order to maintain the finish underneath the LeBra® Front End Cover.
- [] Install the LeBra® Front End Cover in temperatures of 70°F (21°C) or higher. The warmth will make the fabric more pliable and will allow it to stretch slightly for a tighter and smoother fit.
- [] Do not use vinyl cleaners or protectants on your LeBra® Front End Cover. These cleaners reduce the breathability of the vinyl and will void the Global Accessories Warranty.
- [] Do not install the LeBra® Front End Cover on any vehicle that does not still have its original factory paint. Global Accessories will not be held liable for any warranty claims of paint damage to repainted vehicles.
- [] Remember that the LeBra® Front End Cover also protects paint from fading due to sunlight while the rest of the car is exposed. Global Accessories will not be held liable for any warranty claims on sun-faded paint.
- [] **Caution:** There may be elastic straps described in some sections of this manual that can snap back if not properly hooked. To avoid injuries, exercise caution and use safety glasses when installing.
- [] Where available, always use the loops sewn to the cover to remove the plastic clips. **DO NOT PULL UP ON THE CLIPS OR THE FABRIC TO REMOVE THE COVER.** When removing the cover, it will be easiest to reverse the installation steps.

## Contents

Tools Needed	Pg. 2
Parts List	Pg. 2
Hardware Identification	Pg. 2
Installation Instructions	
Hardware Fasteners	Pg. 2
Fabric Fasteners	Pg. 2
Front End Cover	Pg. 3
Forming Metal Plates	Pg. 3

## What You'll Need

Here's all you'll need to install your LeBra® Front End Cover.

- A 9/32" wrench
- A flathead screwdriver
- A pair of scissors
- Safety glasses
- Alcohol/Water solution (50/50)
- A soft cloth
- A tape measure or ruler

That's it. With these tools, you're ready to go.


## Unpacking: What You Have

Remove all parts from the shipping container. Check each part included against the following Parts List and look for any possible damage from shipping.

## Parts List

Item	Description	Qty
1	Cover, front end	1
2	Plates, metal	8
3	Hook, adhesive 1" x 10"	1
4	Hook, adhesive 5/8" x 6"	1
5	Hook, grommet	6

## Hardware Identification

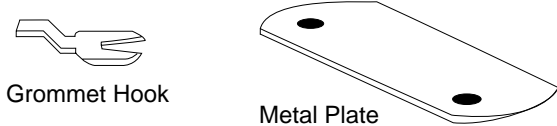

The right side of the fabric is indicated as:

## The Hardware Fasteners


One of the features that makes your LeBra® Front End Cover the very best available is that you can access the engine compartment without removing or adjusting the cover.

Your LeBra® Front End Cover may be quickly removed and reinstalled for cleaning and maintenance by undoing the fasteners. There are two types of fasteners—hardware fasteners and fabric fasteners. The following section will show you how to install the hardware fasteners. This model uses a combination of Grommet Hooks and Metal Plates. Remove your front license plate holder before beginning this installation.

## Step One

Open the hood and loosen the three (3) 9/32 inch bolts on each side of the front of the engine compartment. See Figure 1. Slide a Grommet Hook under each bolt so that the hook points down toward the ground. Tighten the bolts until you cannot turn the Grommet Hook.

Figure 1

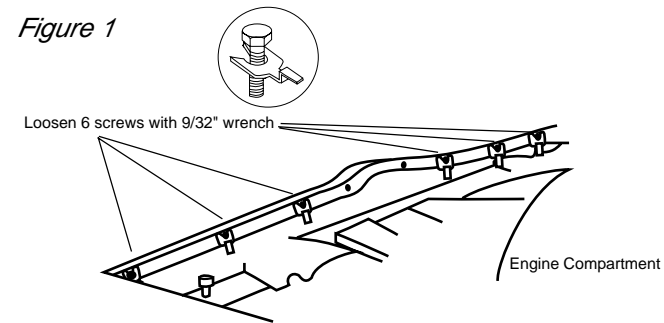


*Note: The end of the Grommet Hook may need to be raised slightly to allow the Grommet on the cover to slide over it. Place a screwdriver under the hook and lift slightly to bend the hook.*

## Step Two

Insert a Metal Plate into each pocket on the back side of the LeBra® front cover as in Figure 2. Make sure that you slide the plates completely into the pockets and leave no metal exposed. Exposed metal can damage the paint on the vehicle.

Figure 2

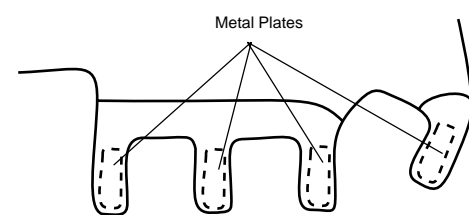

## Fabric Fasteners

The adhesive Hook Strip attaches to the Loop sewn into the cover and provides a quick and secure fastener.

## Step One

Use a 50/50 solution of alcohol and water to clean the locations for the adhesive Hook Strip (see Figures 3 and 4). Be sure to remove all dirt, silicone sealants, wax, and any other substances which might prevent the adhesive from sticking to the paint.

*Note: Do not attempt to apply the adhesive hook in temperatures of less than 60° F. The adhesive backing will fully set within 72 hours of application. You may install the Front End Cover after about one hour, but you should avoid unnecessary fastening and unfastening of the cover for 72 hours.*

## Step Two

Cut the 5/8 inch adhesive hook as follows:

- One (1) piece that is four (4) inches long
- Two (2) pieces that are one (1) inch long

Cut the 1 inch adhesive hook as follows:


- Two (2) pieces that are five (5) inches long.
- Then cut those in half, lengthwise.

Do not remove the plastic backing until you are ready to install the hook.

## Step Three

Install the 5/8 inch adhesive hook strips as shown in Figure 3. Remove the plastic backing and use firm, direct pressure to insure maximum adhesion.


Figure 3

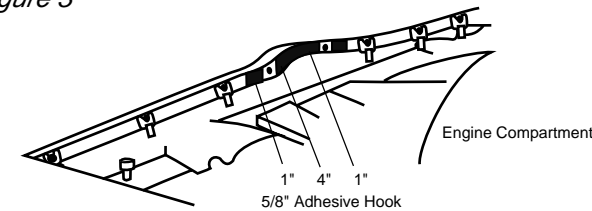

## Step Four

Install the 5 x 1/2 inch adhesive strips on the plastic molding above each headlight, starting at corner closest to center of vehicle, as shown in Figure 4. Remove the plastic backing and use firm, direct pressure to insure maximum adhesion.

Figure 4

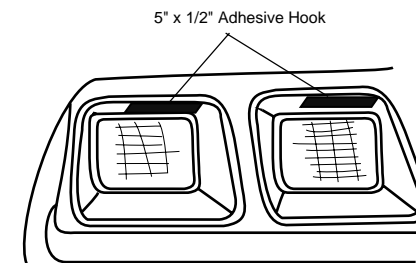

## Installing the Front Cover

### Step One

Determine the basic orientation of the Front Cover. The edge with six (6) Grommet holes will be positioned at the top. Slide the Grommets over the Grommet Hooks you installed in front of the engine compartment. Then attach the Loop Strip sewn into the cover to the adhesive Hook Strips you have installed in front of the engine compartment.

## Step Two

Pull the Loop Strips sewn to the cover over the molding above each headlight and attach to the adhesive Hook Strips you have installed.


## Forming the Metal Plates

The Metal Plates included with your LeBra® Front End Cover allow you extra security in the fit of the cover to your vehicle. Stretch the Cover as tightly as possible before bending the plates.

### Step One

Pull the fabric down and to the back. Hold the cover in place with one hand. With the other hand, bend the Metal Plate up underneath the lower edge of the vehicle. Repeat this step for the other side (see Figure 5).

Figure 5

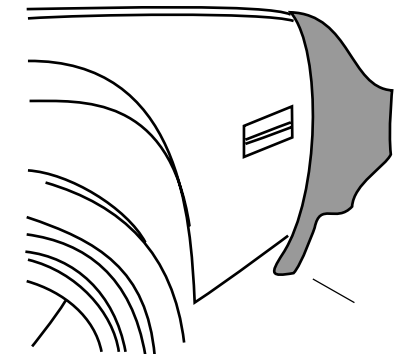

*Note: Be sure that the vinyl fabric fits as tightly and smoothly as possible before bending the Metal Plates into place.*

### Step Two

Stretch the fabric down to the front edge of the vehicle and align. Then bend the six (6) remaining Metal Plates up under the front of the vehicle. You can now put the license plate holder back on.

*"This completes the installation of your custom-designed front end cover."*